ZV-23A User's Manual (Vacuum Table for PNC-2300/EGX-300/EGX-350)





This product does not include a vacuum pump.

A vacuum pump and tube fitting of the specifications shown below must be procured separately.

[Recommended Vacuum Pump Specifications]

Vacuum: -45.3 kPa (-340 mmHg)

Open flow rate: 55 liters/min.specifications

[Vacuum-pump tube-fitting Specifications]


Use a fitting which mates with the tube included with the ZV-23A (tube outer diameter: 8.0 mm

* Commercially available double-sided tape is needed to replace the rubber sheet.

Install the Vacuum Table


1 Detach the table.

Remove the four screws.

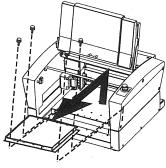


Use the Phillips screwdriver included with the product to attach the vacuum table.

Pass the tube under the main unit, and connect the vacuum table to the vacuum pump.

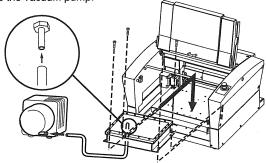


Makes Holes for Suction

3 Operate the vacuum pump and make holes corresponding to the shape of the material to be used.

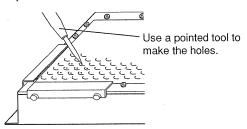


Secure the Material in Place

Secure the material in place. (If suction is weak, enlarge the holes slightly.)

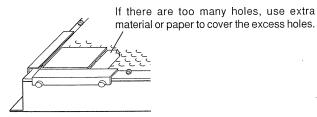


Repositioning the Material Guides

The material guides can be repositioned or removed. The vertical guide and the horizontal guide have different lengths.

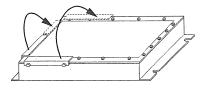


Replacing the Rubber Sheet (Sold Separately)


Use the Phillips screwdriver included with the product to remove the material guides and the cover.

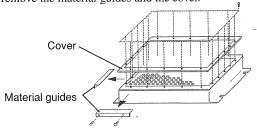

Detach the rubber sheet from the cover.

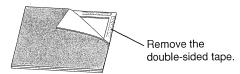

Affix a new rubber sheet to the cover.

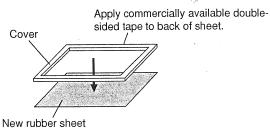

Attach the cover and the material guides.

